


## Single Indicator Gauge

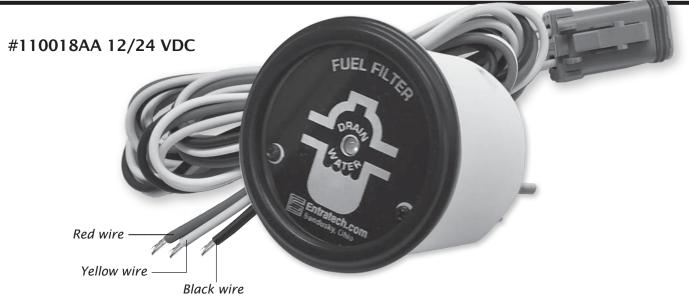

## **INSTALLATION:**

- 1. Connect Wire harness to Gauge
- 2. YELLOW WIRE from Gauge Harness connects to YELLOW WIRE from Sensor.
- 3. BLACK WIRE from Gauge Harness connects to BLACK WIRE from Sensor to negative terminal on battery (Ground).
- 4. RED WIRE from Gauge Harness connects to 1 AMP FUSE.

On initial power up there will be a few second "power on" test.

When water is detected there is a slosh delay for a few seconds. Then the blue LED on the gauge will light and the internal beeper will sound.

To prevent annoying the operator the beeper will shut off after about 10 seconds. The Blue LED will continue to stay lit. The system will reset after the ignition switch is turned off.

All wires are 36 inches 18 gauge GXL.

## SENSOR GROUND AND INDICATOR GROUND TO NEGATIVE TERMINAL 12/24 V IGNITION SWITCH

## **USE WITH THESE PRODUCTS:**











SINGLE GAUGE: ES06072019



Entratech Systems LLC 202 East Fox Road 419.433.7683 Sandusky, Ohio 44870

www.entratech.com info@entratech.com